





CERTIFICATO N. CERTIFICATE No.

19714/09/S

SI CERTIFICA CHE IL SISTEMA DI GESTIONE PER LA QUALITÀ DI IT IS HEREBY CERTIFIED THAT THE QUALITY MANAGEMENT SYSTEM OF

CARTONI S.P.A.

VIA DI PORTONACCIO, 33/B 00159 ROMA (RM) ITALIA

NELLE SEGUENTI UNITÀ OPERATIVE /IN THE FOLLOWING OPERATIONAL UNITS

VIA DI PORTONACCIO, 33/B 00159 ROMA (RM) ITALIA

É CONFORME ALLA NORMA / IS IN COMPLIANCE WITH THE STANDARD

ISO 9001:2015

PER I SEGUENTI CAMPI DI ATTIVITÀ / FOR THE FOLLOWING FIELD(S) OF ACTIVITIES

IAF:17 IAF:29

CISQ is a member of

Per informazioni sulla validità

For information concerning velidity of the certificate, you can visit the ate

Reference is to be made to the relevant documented information for the requirements of the standard that cannot be applied to the Organization's menagement

Per i requisti della norma non applicabili al campo di applicazione del sistema di gestione dell'organizzazione, riferini alla informazioni documentata reliative.

PROGETTAZIONE, FABBRICAZIONE ED ASSISTENZA POST-VENDITA DI PRODOTTI PER LA CINEMATOGRAFIA E LA TELEVISIONE PROFESSIONALE. COMMERCALLIZZAZIONE DI PRODOTTI ED ACCESSIONI IN CONCESSIONE PER LA CINEMATOGRAFIA E LA TELEVISIONE PROFESSIONALE

DESIGN, MANUFACTURE AND POST-SALE ASSISTANCE OF PROFESSIONAL BROADCAST AND FILM EQUIPMENT. MARKETING OF PROFESSIONAL BROADCAST AND FILM ACCESSORIES AND PRODUCTS AS LOCAL AGENCYREPRESENTATIVE

La velidad del presente certificant à autorifinata a sorvegimons periodica amusite l'aumentante et al masame competo de sisteme di questione con periodicità frement. The velidit of the certificate del appendent on a nome? an montificate qualit and no a competite enviere, serve fine peuse. Of the manner et system L'une si si velidat del presente certificate conse opgetti el rispetto del documente RENK. Registramento parti d'artificatione del Sisteme di Gestione per la Caustità. The use are visibility of this confestible area subject to complance estit in a RENM document. Public Sisteme (Public or Caustità dell'accione d'accident dell'accident della complance dell'accident dell'accident dell'accident dell'accident della complance delle me ReNM document dell'accident della complance della complance della media della complance de

Prima emissione First Issue

12.06.2009

Data decisione di rinnovo Renewal decision date

24.05.2018

Data scadenza Expiry Date 02.06.2021 Data revisione Revision date

24.05.2018

Amlicare Rini

Rome Management System Certification, Head

lu (coutlin

ACCREDIA 🔨

SGQ Nº 002 A

Hombro degli Accordi di McLos Ricordecimento EA, 10° e EAC Eignetory of ER, 10° and EAC Mutual Recognition Agreements



RINA Services S.p.A. Via Corsica 12 - 16128 Genova Italy CISQ

WWW.000,000

CISIC a la Reformance traine di Organismi di Certificazioni dei sistemi di gestione sciendate CISIC ili The talian Federation of management system Certification Bodies



1.	SAFETY & SET-UP INTRODUCTION	5
2.	OPERATING ELEMENTS	6
3.	Procedures	8
4.	Specifications	9
5.	Maintenance	10
6.	Warranty	10
7.	Accessories & product line	11

CARTONI®

All rights reserved © Manual Version: 2.3 Issue date: March 2020



1. SAFETY & SET-UP INTRODUCTION

The **FOCUS 22** Fluid Head is specifically designed to support the wide variety of new ENG cameras, so compact yet so fully accessorized, featuring the patented **CARTONI** "wing" continuously adjustable counterbalance. With its broad range of payloads – 3 kg (6.6 lbs) to 22 kg (49.0 lbs) - The **FOCUS 22** is the ideal partner for all news gathering and outdoor shooting jobs.

Rugged but easy to operate the Fluid Head has all the ergonomic settings at the right place. Fluid drag in both pan and tilt feature the distinctive renowned **CARTONI** patented infinitely adjustable labyrinth system.

Positive locks, wide range sliding platform incorporating the European style quick release plate, a switchable illuminated spirit level completes the operating specs.


FOCUS 22, weighs only 3,9 kg (8.6 lbs) thanks to the extensive use of extremely lightweight magnesium alloys.


The **FOCUS 22** interfaces with all 100 mm bowl base tripods. In the **FOCUS 22/150 version**, it interfaces with the all 150 mm bowl base Tripods and with Pedestals through the standard Vinten 4 bolts.

- **√**
- Before using the product read this user manual.
- Before installing the Fluid Head on the Tripod check the Tripod stability.
- Verify that the Camera payload (including lenses and accessories) is lower than the maximum capacity of the Fluid Head.
- Before installing the Camera make sure that the Fluid Head is in good conditions and bares no evident damages.


7 Tilt brake lever

2. OPERATING ELEMENTS

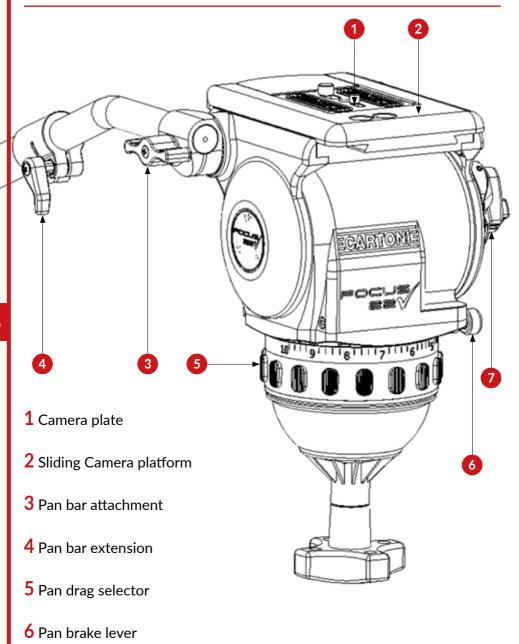

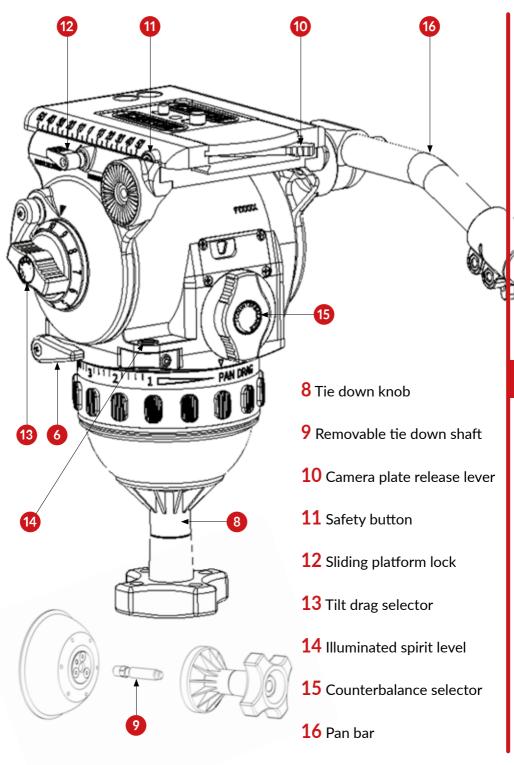

3. Procedures



- Connect the Pan bar (16) to the Fluid Head tightening the lever (3) on the Pan bar attachment and select your desired operating angle. The telescopic Pan bar length can be adjusted via lever (4).
- Lock both Pan and Tilt brakes (6 & 7), turn both Tilt drag selector (13) and Counterbalance knob (15) to the minimum.
- Open the Camera plate release lever (10) completely to release the Camera plate (1).
- Remove the Camera plate (1) from the sliding Camera platform (2) by squeezing simultaneously Camera plate release lever (10) and the safety button (11). Attach the Camera plate (1) to the bottom of the Camera and tighten the clamping screw to secure the Camera. Try to center the Camera plate on the Camera, keeping the center of gravity (CG) position in mind.
- Lock the sliding platform lever (12), click the Camera into the quick release sliding platform (2), the plate will lock into place.
- Hold the Camera in horizontal position with the Pan bar (16) and release the Tilt brake lever (7). Release the sliding platform lever (12) and find the correct center of gravity (CG) position, by sliding the Camera platform (2) back and forth until you have achieved the correct balance. Lock the sliding platform lock (12).

- Set the Counterbalance system by turning the balance knob clockwise (15) to appropriate tension. The Camera has to stay at any tilt angle. Eventually fine-tune by adjusting the sliding plate.
- Unlock the Pan brake lever (6) and set the Fluid drag control by adjusting selectors (5 & 13).
- The **FOCUS 22** can be attached to most of the sliders via a 3/8" treaded hole under the Head. Remove the tie down shaft (9) with a M10 key and find the hole underneath.
- When the illuminated spirit level light fails it is time to replace the batteries (14). Pull out the battery tray.

4. Specifications

Minimum payload	3 Kg	6.6 lbs
Maximum payload	22 Kg	49 lbs
Weight Focus 22	3,9 Kg	8.6 lbs
Weight Focus 22/150	4,9 Kg	10.8 lbs
Camera Attachment	Euro-Style quick rele	ase
Bowl diameter	100 mm/150/Flat	
Fluid Drag	Continuous	
Counterbalance	Continuous	
Pan range	360°	
Tilt range	+-90°	
Temperature range	-40 /+60 °C -40	/+140 °F

5. MAINTENANCE

With indoor use - when needed - just clean the **FOCUS 22** and Tripod with a soft cloth. Dirt accumulated during storage may be removed using a brush or Air spray.

CARTONI products main mechanisms are sealed as they are also built for professional outdoor use.

However, use under rough conditions will require special care. Salt water is very corrosive and can cause extreme damages. In atempt to avoid further damage the Fluid Head should be washed off with fresh water at the earliest opportunity and dried before storage.

Sand and dirt are abrasive and should be removed using a semi-stiff brush or Air spray.

Disconnect the illuminated spirit level battery during long term storage.

6. WARRANTY

All **CARTONI** Fluid Heads & Pedestals have a free of charge three (3) year warranty. Register your product at www.cartoni.com within 30 days from date of first purchase/invoice to receive further two (2) year warranty for the unsurpassed free five (5) year warranty.

Tripods, spreaders, dollies and all accessories are guaranteed one (1) year from the date of first purchase/invoice.

CARTONI warrant that the product supplied will - under proper use - be free from defects in workmanship and materials and agrees that it will, at its option, either repair or replace any defective part within duration of warranty from date of first purchase with no labour charge.

This warranty does not apply to any **CARTONI** product that has been damaged in shipping or handling, abused, misused, operated contrary to instructions for use, neglected, normal wear or tear, modified or changed in design or construction or serviced by unauthorized parties.

Repairs or misuse by any unauthorized parties will void this warranty.

Warranty claims must be submitted – in writing - to the factory for verification or to an authorized distributor/dealer designated by **CARTONI**.

It is the end user's responsibility when ordering to ensure that the products ordered conform to his requirements.

All freight of product to **CARTONI** must be prepaid. All implied warranties are limited to the time period set forth herein & subject to change without notice.

No liability can be accepted for any variation.

7. Accessories & PRODUCT LINE

For the complete Accessories list & Product line please visit **CARTONI**'s official website **www.cartoni.com**.

Every product has an updated list of compatible items sorted by groups, with descriptions and technical data.





CARTONI S.p.A

Via di Portonaccio, 33/B - 00159 Rome (Italy) Phone +39 06 4382002 Fax +39 06 43588293 Email: cartoni@cartoni.com

www.cartoni.com